


1-4. Opening and closing the windows and moon roof

Power windows

The power windows can be opened and closed using the following switches.

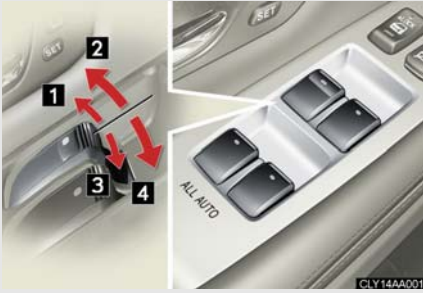

- 1 Closing
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*

*: Pushing the switch in the opposite direction will stop window travel partway.

Lock switch



Press the switch down to lock passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

■ The power windows can be operated when

The ignition switch must be in the ON position.

■ Linked door lock window operation

- The power windows can be opened and closed using the key. (→P. 7)
- The power windows can be opened using the wireless remote control. (→P. 4)

■ Retained accessory power

The power windows can be operated for approximately 45 seconds even after the ignition key is turned to the ACC or LOCK position. They cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

■ If the power window does not work correctly

The power windows must be initialized in order to ensure proper operation. (Perform for each window with the switch for each seat.)

STEP 1 Open the window halfway.

STEP 2 Fully close the window by pulling the switch up and continue holding the switch for one second.

The indicator on the switch changes from a flashing pattern to being on when initial settings are complete.

■ Customization

Settings (e.g. linked door lock operation) can be changed. (→P. 412)

CAUTION

■ Closing the windows

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- Do not allow children to operate the power windows.
Closing a power window on someone can cause serious injury, and in some instances, even death.

■ Jam protection function

- Never try jamming any part of your body to activate the jam protection function intentionally.
- The jam protection function may not work if something gets caught just before the window fully closes.

1-4. Opening and closing the windows and moon roof

Moon roof (if equipped)

Use the overhead switches to open, close and tilt the moon roof up and down.

■ Opening and closing

► Standard type



1 Open


The moon roof stops slightly before the fully opened position.

Push the switch again to fully open.

2 Close

Push the switch in the either direction to stop the moon roof partway.

► Multi-panel type

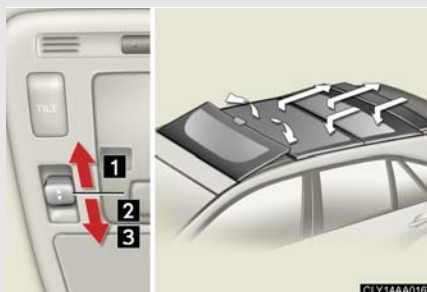

1 Open

2 Closes the center and rear panels


3 Closes the front panel (push and hold)

Push the switch in the either direction to stop the moon roof partway.

1-4. Opening and closing the windows and moon roof

■ Tilting up and down

► Standard type

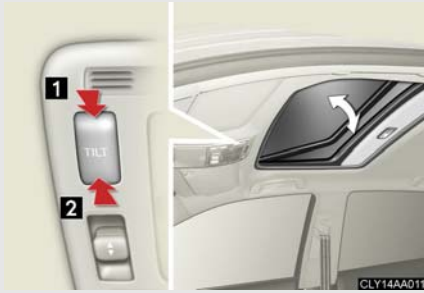


1 Tilt up

2 Tilt down

Push the switch in the either side to stop the moon roof partway.

► Multi-panel type

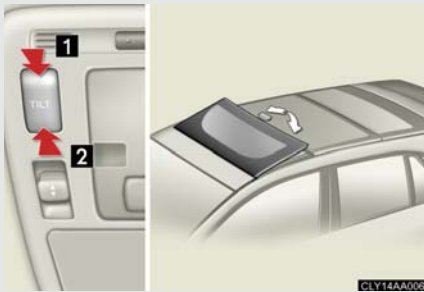

1 Tilt up

Push the switch in the either side to stop the moon roof partway.

2 Tilt down (push and hold)

■ The moon roof can be operated when

The ignition switch is in the ON position.

■ Linked door lock moon roof operation (standard type)

- The moon roof can be opened and closed using the key. (→P. 7)
- The moon roof can be opened using the wireless remote control. (→P. 4)

■ Operating the moon roof after turning the ignition key to the ACC or LOCK position

The moon roof can be operated for approximately 45 seconds even after the ignition key is turned to the ACC or LOCK position. It cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object is detected between the moon roof and the frame while closing or tilting down, travel is stopped and the moon roof opens slightly.

■ Open moon roof reminder buzzer

A buzzer will sound if the moon roof is left open when you turn the ignition key to the ACC or LOCK position and open the driver's door.

■ If the moon roof does not work correctly (Multi-panel type only)

The moon roof must be initialized in order to ensure proper operation.



- 1 Push until the front panel fully closes.
- 2 Hold for about 1 second.

■ To reduce moon roof wind noise

Drive with the moon roof where it has stopped when opening automatically.

■ Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

■ Customization

Settings (e.g. linked door lock operation) can be changed. (→P. 412)

CAUTION

■ Opening the moon roof

Observe the following precautions.

Failing to do so may cause death or serious injury.

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

■ Closing the moon roof

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their bodies in a position where they could be caught when the moon roof is being operated.
- Do not allow children to operate the moon roof.
Closing the moon roof on someone can cause death or serious injury.

■ Jam protection function

- Never try jamming any part of your body to activate the jam protection function intentionally.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.

NOTICE

■ When opening the moon roof (multi-panel type)

- Before opening the moon roof, make sure the radio antenna is in the lock position.
Otherwise, the antenna may get caught between the moon roof and frame.
- There is the possibility that water or rain will get into the vehicle if you operate the moon roof after a rainfall, snowfall or car wash. Wipe the moon roof dry with a cloth before operating it.